

Tropical Storm Epoxy Step-by-Step Guide



3 Steps to Prep

Use blue tape for delicate surfaces, & easy release
Prep is very important

<p>1-Walls</p>	<p>3-Floor</p>
<p>2-Cabinets</p>	

Prep Smooth Surfaces

Sand & clean countertop
Thin layer of Bonding Primer
2 coats of Paint&Primer in one

<p>1-Sand</p>	<p>2-Bonding Primer</p>
<p>3-Paint&Primer</p>	

Make A Sample



On a small board test out your color recipe
You can fine tune the recipe to fit your style




Color Recipe



Metallic Powders:
Pearl
Real Teal
Bright Silver
Ocean Blue
Diamond Dust

Base Tint: White

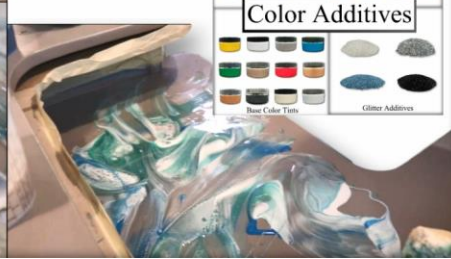

Meld with a heat gun or torch



Drag veins with a paint stick



Drip Removal

Wait 3-4 hours depending on room temp

Scrape the bottom of the edges with a popsicle stick or trowel also use a gloved hand to smooth the underside



1-Mix



2-Apply



3-Trowel

Clear Coat



4-Chop



5-Torch



Enjoy Your New Epoxy Countertops



Tropical Storm 40 sqft Kit

Tropical Storm Epoxy Check List

- Tropical Storm Kit
- Plastic for Cabinets
- Masking Tape and Paper
- Floor covering
- Torch head & Propane
- Sea Side Spray Paint
- Gloss White Spray Paint
- Gloss Black Spray Paint
- Cobalt Blue Spray Paint
- Rubber Gloves
- Paint Sticks
- Heat Gun
- Mixing Buckets
- Paddle Mixer and Drill

